

Summit Tractors Maintenance - Intervals and Fluid Specifications

MAINTENANCE SCHEDULE: Please refer to and utilize the following maintenance schedule, which applies to tractors operated in normal conditions. Adjust accordingly when frequently used in wet, muddy conditions; for example by cleaning and greasing more frequently, or by cleaning the air cleaner element and fuel filter more frequently when operated in dry, dusty conditions. PLEASE REFER TO SECTION 50 (FIFTY) OF YOUR TRACTOR OPERATOR'S MANUAL FOR ADDITIONAL INFORMATION RELATED TO THE PERFORMANCE OF TRACTOR MAINTENANCE.

INFORMATION RELATED TO THE PERFORMANCE OF TRACTOR MAINTENANCE							
	FREQUENCY						
MAINTENANCE AREA	50 HOURS	EVERY 250 HOURS	500 HOURS	750 HOURS	EVERY 1000 HOURS	EVERY 1250 HOURS	EVERY 1500 HOURS
GENERAL							
Washing	W	W	W	W	W	W	W
Greasing	G	G	G	G	G	G	G
Re-Tighten Fasteners	СТ	СТ	СТ	СТ	СТ	СТ	СТ
Rear View Mirror Holder	СТ	СТ	СТ	СТ	СТ	СТ	СТ
ENGINE							
Engine Oil	R	R	R	R	R	R	R
Engine Oil Filter	R	R	R	R	R	R	R
Tappet (Valve Lifter) Clearance	CA	CA	CA	CA	CA	CA	CA
Fuel Filter Element	R	R	R	R	R	R	R
Fan Belt Tension	СТ	СТ	СТ	СТ	СТ	СТ	СТ
Radiator Coolant Level	СР	СР	СР	СР	СР	СР	СР
Coolant Change/Radiator Flushing		Every 1000 hours or 2 years, whichever is earlier					
Air Cleaner Element	CL	CL	CL	CL	CL	CL	CL
Fuel Injector	Nozzle tip cleaning every 1500 hours or when required. Fuel injection nozzle every 3000 hours or when required						
Glow Plug			С		С		С
Fuel Tank Cleaning		Every 500 hours or one year, whichever is earlier					
TRANSMISSION/HYDRAULIC							
Transmission Breather Assembly	CL	CL	CL	CL	CL	CL	CL
Hydraulic Oil Filter (Suction)	R	R	R	R	R	R	R
Hydraulic Oil Filter (Delivery)	R	R	R	R	R	R	R
Transmission Oil	R	R	R	R	R	R	R
Operation of Hydraulic Lift	С	С	С	С	С	С	С
Hydraulic Oil Strainer	CL	CL	CL	CL	CL	CL	R
BRAKES							
Operation of Brakes	С	С	С	С	С	С	С
Brake Pedal Free Play	CA	CA	CA	CA	CA	CA	CA
C Charle CA Charle O Adina Cl Cla	CD CI	0.0.1	CT CL L	0. T' .		D D 1	34/ 34/ 1

C-Check, CA-Check & Adjust, CL-Clean, CR-Clean & Replace, CT-Check & Tighten, G-Greasing, R-Replace, W-Wash.

Beyond 1500 hours, repeat the cycle every 250 hours.



Summit Tractors Maintenance - Intervals and Fluid Specifications

MAINTENANCE SCHEDULE: Please refer to and utilize the following maintenance schedule, which applies to tractors operated in normal conditions. Adjust accordingly when frequently used in wet, muddy conditions; for example by cleaning and greasing more frequently, or by cleaning the air cleaner element and fuel filter more frequently when operated in dry, dusty conditions. PLEASE REFER TO SECTION 50 (FIFTY) OF YOUR TRACTOR OPERATOR'S MANUAL FOR ADDITIONAL INFORMATION RELATED TO THE PERFORMANCE OF TRACTOR MAINTENANCE

FREQUENCY						
50 HOURS	EVERY 250 HOURS	EVERY 500 HOURS	EVERY 750 HOURS	EVERY 1000 HOURS	EVERY 1250 HOURS	EVERY 1500 HOURS
С	С	С	С	С	С	С
FRONT AXLE 4X4						
R	С	R	С	R	С	R
CL	CL	CL	CL	CL	CL	CL
С	С	CA	С	CA	С	CA
TIRES & WHEELS						
СТ	СТ	СТ	СТ	СТ	СТ	СТ
CA	CA	CA	CA	CA	CA	CA
BATTERY						
С	С	С	С	С	С	С
CA	CA	CA	CA	CA	CA	CA
ELECTRICAL						
С	С	С	С	С	С	С
	C C C C C C C C C C C C C C C C C C C	C C CT CT CA CA C C CA CA C C	50 HOURS EVERY 250 HOURS EVERY 500 HOURS C C C R C R CL CL CL C C CA CT CA CA CA CA CA CA CA CA CA	50 HOURS EVERY 250 HOURS EVERY 500 HOURS EVERY 750 HOURS C C C C R C R C CL CL CL CL C C CA C CT CT CT CT CT CT CT CA CA CA CA CA CA CA CA CA CA C	50 HOURS EVERY 250 HOURS EVERY 500 HOURS EVERY 750 HOURS EVERY 1000 HOURS C C C C C R C R C R CL CL CL CL CL C C CA C CA CT CA CA CA CA CA CA CA CA CA CA CA CA	50 HOURS EVERY 250 HOURS EVERY 500 HOURS EVERY 750 HOURS EVERY 1000 HOURS

C-Check, CA-Check & Adjust, CL-Clean, CR-Clean & Replace, CT-Check & Tighten, G-Greasing, R-Replace, W-Wash.

Beyond 1500 hours, repeat the cycle every 250 hours.

OIL AND LUBRICATION CHART					
OIL, LUBRICANT OR FUEL CATEGORY	CAPACITY	RECOMMENDED GRADE			
Engine Oil	1.11 US Gallons (4.2 Liters)	15W40, API: CJ-4, CI-4 Plus, CI-4, CH-4, Total Rubia TIR 7900: 0W40, CI-4 or higher for temp 14 deg. F to -4 degree F (-10 deg C to -20 deg C)			
Transmission	6.6 US Gallons (25 Liters)	ISO VG 32/ISO VG56			
Front Axle	0.7 US Gallons (2.7 Liters)	Total Dynatrans MP/API: GL-5			
Fuel	6.87 US Gallons (26 Liters)	Ultra Low Sulphur Diesel Fuel			
Coolant	1.14 Gallons (4.3L) Antifreeze, .45 Gallons (1.72L) Distilled Water Recommended Ratio: 60% : 40%				