

SUMMIT[®]

TRACTORS

READY TO GO TO WORK[®]

Getting to Know Your Summit TX25H Tractor



Inside This Guide:

- Key Features
- How to Start & Operate
- Registering Your Tractor
- Maintenance Guide
- Warranty Statement
- Link to Full Summit Tractors Line
- Attachment Compatibility
- Key 3rd Function & Loader Controls
- 50-Hour Service Video Link
- Obtaining Service
- Facebook Owner's Group
- Contacting Summit Tractors



PROUD
SUPPORTER
OF THE

Tunnel to Towers Foundation

T2T.ORG

A Donation is Made by Summit Tractors for Every Tractor Sold



CONTACT SUMMIT TRACTORS

Call 770-209-3390 – Press 1 for Sales,
Press 2 For Service

Email Sales: sales@summittractors.com

Email Service: service@summittractors.com

SUMMITTRACTORS.COM



Welcome to the Summit Tractors Family!

Dear New Summit Tractor Owner,

On behalf of the Summit Tractors team, we thank you for the confidence that you have in the **Summit Tractors™** brand and our products, the retail store where you made your purchase, and our family of U.S. and international tractor, attachment, tires & wheel, and accessories manufacturing partners.

We realize that you have many choices when it comes to purchasing compact utility tractor equipment, and we endeavor to exceed your expectations for the overall value, quality, and productivity of the equipment, and through our customer and equipment service network.

This guide includes key information about your tractor and features, how to start & operate it, maintenance guides, compatible attachments, how to perform tractor maintenance, warranty, how to register your tractor for warranty, obtain parts & service support, join the Summit Tractors Facebook Owner's Group and more.

Before using your tractor, we highly recommend that you and any other person that will use your tractor read the enclosed **tractor operator's manual** thoroughly, with a particular focus on the **SAFETY** related information covered in **Chapter 2, WARRANTY & SAFETY** of the operator's manual.

To properly maintain your equipment, you will find very useful information related to routine checks and periodic maintenance in the operator manual's **Chapter 5, MAINTENANCE**, and also provided in this **guidebook**. If you want to perform your own periodic maintenance, we will assist by providing access to the right parts via **www.summittractorsattachments.com**. If you'd like to have one of our Summit Tractors Service Dealers handle tractor maintenance for you, use the Summit Tractors Service dealer locator on summittractors.com. **If you don't find a service location near you, please call 770-209-3390 and press 2, or send an email to service@summittractors.com and we will onboard a qualified service provider in your area.**

Again, we thank you and welcome you to the family of Summit Tractors™ owners. We will always do our best to support you throughout many years of productive and trouble-free use of your equipment

Sincerely,

The Summit Tractors Team

WWW.SUMMITTRACTORS.COM



SUMMITTRACTORS.COM



Table of Contents

SECTION	PAGE(S)
1. Tractor Specifications & Key Features.....	4
2. Summit TX25H Standard Features – Left Side View.....	5
3. Summit TX25H Standard Features – Right Side View.....	6
4. Summit TX25H Standard Features – Rear View.....	7
5. Summit TX25H Standard Features – Front View.....	8
6. Summit TX25H Standard Features – Operator Station.....	9
7. Operator Console and Engine.....	10
8. Starting & Operating the Tractor.....	11
9. 3rd Function Hydraulic Diverter Valve & Loader Lowering Speed Control.....	12
10. Tires & Wheels and RimGuard™ Liquid Ballast.....	13
11. Attachment & Implement Compatibility Chart.....	14
12. Summit Tractors Brand Attachments.....	15
13. Summit BHX76 Backhoe & GX54 Grapple.....	16
14. Summit BPX60 BoxPlane & PFX36 Pallet Forks.....	17
15. Tractor Maintenance Chart.....	18-19
16. Warranty Statements.....	20-21
17. Tractor Registration & Service Resources.....	22
18. Summit Tractors Website & Social Media.....	23
19. Back Cover.....	24

Summit TX25H Open Station Tractor

FULL STANDARD FEATURES

- 24.7HP Mitsubishi 3-Cyl EPA Tier 4 Diesel Engine
- 18 PTO HP, 2100 RPM Mid, 540 RPM Rear PTO
- Hydrostatic Transmission w/Twin Touch Pedals
- Cruise Control, 4WD Drive, Differential Lock
- Goodyear (USA) R14 Tires w/Stem Guards
- RimGuard Liquid Ballast in Rear Tires
- One Set Self-Canceling Detent Rear Remotes
- Front Tow Hook
- Category 1 3-pt Hitch w/Position Control
- Rear Cross Drawbar
- Rear Swinging Drawbar
- Operator Entry Steps and Grab Rails Both Sides
- Cup Holder, 12V Power
- Forest Green, Automotive Quality Paint
- Easy Maintenance Metal One Piece Hood, SMV Sign
- Self-Leveling, Skid-Steer Quick Attach (QA) Loader w/Bucket Level Indicator, Grill Guard
- 3rd Function Loader Valve & Integrated Joystick
- Premium Seat, Embroidered Backrest Extension, Folding Angle-Adjustable Armrests, Retractable Seat Belt, Weight Adjustable Seat Suspension, Operator Presence Switch, Coated PVC Seat Covering
- Folding ROPS, Vibration and Noise Dampening Floor Mat, Ergonomic Controls Layout, Wide Operator Platform Projector Headlamps, Rear Work Light, 3-Pt Hitch Lighting
- Side-View Mirrors
- Industry Longest Full Machine Warranty (3 Years or 2,000 Hours, All Other Brands 2 Years), Competitive Powertrain Warranty (7 Years or 3,000 Hours), Competitive Loader Warranty (1 Year)



Transferable

SUMMITTRACTORS.COM

SUMMIT
TRACTORS

Summit TX25H Standard Features – Left Side View



- A. Skid-Steer Quick Attach (SSQA) Loader
- B. Self-Leveling Loader
- C. Mitsubishi 24.7 HP 3 Cylinder EPA Tier 4 Engine
- D. Easy Access Diesel Fuel Fill
- E. Integrated Joystick With 3rd Function Diverter Button at Top
- F. Premium Suspension Seat With Position, Height, and Weight Adjustments
- G. Foldable Rollover Protection Structure (ROPS)
- H. Grab Rails on Both Sides
- I. Category 1 3-Point Hitch With Cross and Swinging Drawbars
- J. Goodyear R14T Tires With Rears Filled with Rimguard™ Liquid Tire Ballast
- K. Operator Entry Steps Both Sides
- L. Brake Pedal

Summit TX25H Standard Features – Right Side View



- A. Goodyear R14T Tires With Rears Filled with Rimguard™ Liquid Tire Ballast
- B. Category 1 3-Point Hitch With Cross and Swinging Drawbars
- C. Selectable 4WD
- D. Premium Suspension Seat With Position, Height, and Weight Adjustments
- E. Foldable Rollover Protection Structure (ROPS)
- F. Intergrated Joystick With 3rd Function Diverter Button at Top
- G. Side View Mirros - Can Be Folded Forward, Rearward or Removed Entirely
- H. Self-Leveling Loader
- I. Bucket Level Indicator
- J. 3rd Function Hydraulic Diverter Valve – Grapple Ready
- K. Skid-Steer Quick Attach (SSQA) Loader
- L. Side-by-Side Hydrostatic Transmission Pedals
- M. Operator Entry Steps Both Sides

Summit TX25H Standard Features – Rear View

REAR VIEW



- A. Swinging Drawbar
- B. 540 RPM Rear and 2100 RPM Mid-PTO
- C. Category 1 3-Point Hitch With Cross and Swinging Drawbars
- D. Taillight
- E. 7-Pin Trailer Socket
- F. Flashers and Turn Signals
- G. Foldable Rollover Protection Structure (ROPS)
- H. Rear Worklight
- I. Self-Cancelling Detent Rear Remotes

Summit TX25H Standard Features – Front View

FRONT VIEW



- A. Projector Headlights
- B. Metal Hood
- C. Mitsubishi 24.7 HP EPA Tier 4 Diesel Engine
- D. Front Tow Hook
- E. Bucket Level Indicator

Summit TX25H Standard Features – Operator Station



- A. 7-Pin Trailer Socket
- B. PTO Selector
- C. Grab Rails on Both Sides
- D. Cup Holder
- E. L-R Transport Lock, Parking Brake, 4WD, Differential Lock
- F. Brake Pedal
- G. Easy Access Diesel Fuel Fill
- H. Tractor Console Close Up
- I. Side-by-Side Hydrostatic Transmission Pedals
- J. Operator Entry Steps Both Sides
- K. Position Control, 3-pt. Hitch & Rear Remote Control Lever
- L. Integrated Joystick with 3rd Function Diverter Button at Top
- M. 12V Power Connection
- N. Rear Worklight
- O. Premium Suspension Seat

Summit TX25H Standard Features – Console & Engine

 


Hazard Lights

PTO Switch

Hand Throttle

Cruise Control

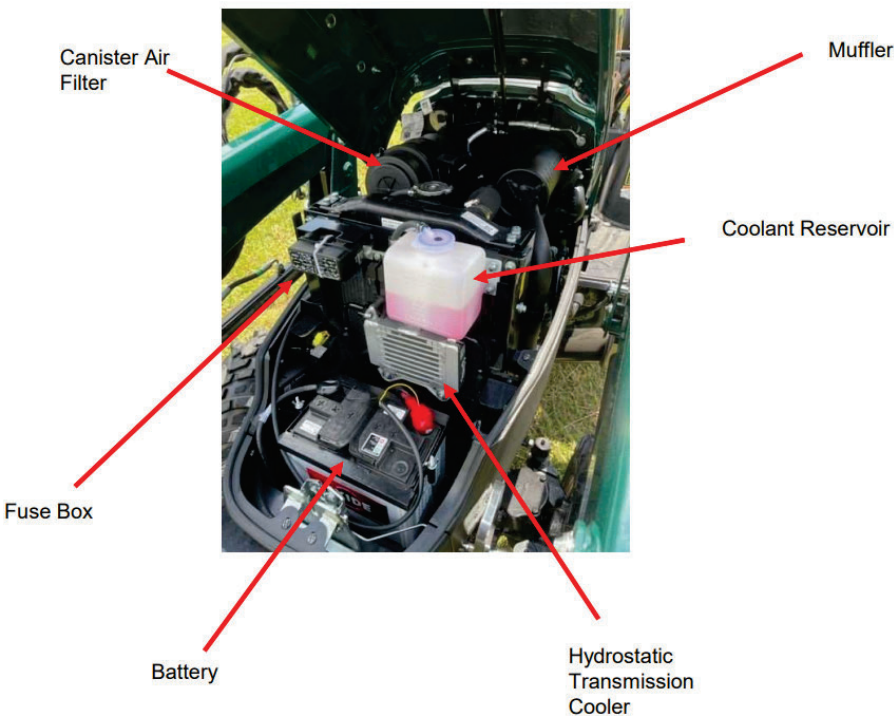

Hood Release – Left Front



Engine Oil Dipstick – Right Side Towards Back

MITSUBISHI 3-CYLINDER
24.7HP DIESEL ENGINE

Starting & Operating the Tractor

- Sit in tractor seat to activate operator presence switch
- Seatbelt fastened
- Rollover Protection Structure in Up Position
- H-N-L Transmission Range Set to “N” (neutral)
- Foot on brake pedal – left foot
- Turn the key to start
- Pull the loader joystick back to raise loader bucket, forward to lower the bucket
- Move transmission range selector to “L” (low)
- Release parking brake (golf ball shaped knob – pull out and down to release, pull out and up to set)
- Release foot brake
- Use the forward/reverse pedals by the right foot for direction
- Hand throttle is located right side of steering wheel – forward increases, backward decreases RPM. Be aware that the loader bucket extends three feet in front of hood
- When completed with movement, lower the loader to the ground
- Turn off tractor
- Set parking brake
- Keep transmission range selector in “L” or “H” when parked
- Slow and easy does it!

3rd Function Hydraulic Diverter Valve & Loader Lowering Speed Control

- **3rd Function:** The Summit LX85 Loader comes standard with a 3rd function hydraulics diverter valve
- When pressing the button on the front side at top of the loader joystick, the loader function switches from dump/curl (joystick side-to-side movement) to the 3rd function
- Typically used to open and closes the jaws of a grapple or changes the angle of a hydraulic front blade
- **Loader Drop Control:** You can control the speed of loader lowering by using the flow rate control valve
- The lever is located at the loader connections block on the right side of the tractor



3rd Function Button
at Front of Joystick



3rd Function Valve
Behind Loader Bucket



Loader Lower Speed
Control Lever

Summit TX25H Standard Features - Tires & Liquid Ballast

- Summit Tractors come standard with Goodyear R14 crossover tires that work well in all conditions; snow, mud, lawn, field

R14T CROSSOVER TIRE DEVELOPMENT

THE INNOVATIVE R14T TREAD DESIGN IS A NEW HYBRID OF AG, TURF AND INDUSTRIAL TREAD DESIGNS, READY FOR ANY APPLICATION



AGRICULTURE

GRIPPING INNOVATION
FRESH FROM THE FIELD

Inspired by years of R-1 agricultural tread design expertise, the R14T utilizes our Optitrac R-1W continuous arc bar angle and shape to provide top-notch traction and exceptional clean out. The R14T is ready for all weather conditions on the farm.



TURF

DEPENDABLE TRACTION
WITH MINIMAL PRESSURE

Borrowing from our R-3 tread designs, the R14T hybrid tire features a high lug-to-void ratio perfect for turf and hard surface applications. The lug design is ideal for cleaning and traction in softer soils.



INDUSTRIAL

THE NEXT GENERATION OF
VERSATILITY

Evolving from our R-4 all-purpose industrial tire designs along with the MXL L3 center tread element, the R14T crossover tire takes versatility to the next level. It is ready to tackle any job on or off the road with better durability, wear and hard surface performance.



GOODYEAR R14T

PERFECTION MIGHT JUST
BE POSSIBLE

The R14T combines the traction and cleaning features of an R-1 agricultural tire with the wear and ride features of an R-4 industrial tire, giving the new tire its name. From hard concrete surfaces to softer soils, the R14T is designed to perform in a variety of conditions.



 
MADE BY TITAN®

RIMGUARD LIQUID TIRE BALLAST

- All rear tires are filled with RimGuard™ Liquid Tire Ballast
- An organic byproduct of sugar beet processing
- 30% heavier than water per gallon, freeze point -35F
- Adds 320 lbs to rear of tractor to optimize loader lift capacity and safety & stability



RimGuard Liquid Tire Ballast - Stickers on Both Rear Tires

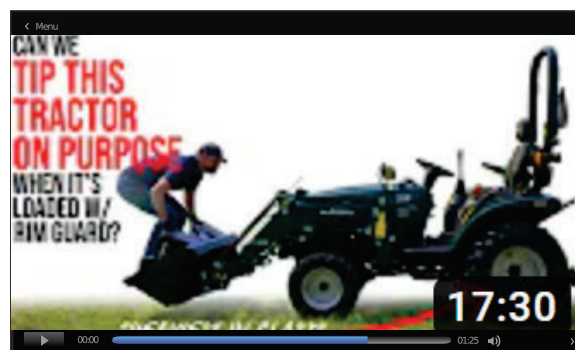

Video demonstrating the benefit can be seen on YouTube Channel Good Works Tractors

Attachment & Implement Compatibility Chart

COMPATIBLE ATTACHMENTS & IMPLEMENTS - 3-POINT OR SKID STEER QUICK-ATTACH MOUNTED

CATEGORY	WORKING WIDTH				HOPPER CAPACITY (LBS.)	TANK GALLON CAPACITY	PALLET FORK LENGTH (INCHES)	RECOMMENDED MAXIMUM WEIGHT OF ATTACHMENT OR IMPLEMENT (LBS.)
PTO DRIVEN 3-POINT EQUIPMENT	48"	54"	60"	72"				
ROTARY CUTTERS	X	X						
ROTARY TILLERS	X	X						
FINISH (GROOMING) MOWERS	X	X	X					
FLAIL MOWERS	X	X						
SEEDERS/SPREADERS					500			
SPRAYERS						60		
SNOW BLOWERS	X	X	X					
OTHER 3-POINT EQUIPMENT								
BOXPLANE	X		X					
REAR BLADES	X	X	X					
LANDSCAPE RAKES	X	X	X	X				
BOX BLADES (BOX SCRAPERS)	X	X	X					
LAND LEVELERS (LAND PLANES)	X	X	X					
CULTIPACKERS	X	X	X					
DISC HARROWS	X	X						
FIELD CULTIVATORS	X	X	X					
12V SPRAYERS						60		
LOADER MOUNTED EQUIPMENT								
GRAPPLES	X	X						275
PALLET FORKS							36,42,48	250
FRONT BLADES		X	X					
SNOW PUSHERS	X	X	X					

- This chart appears on the website and app and presents general guidelines as to the size/weight of various attachments/implements to attain optimal performance
- There is some flexibility with these guidelines, e.g., for example, a 60" rotary cutter can be used, but may struggle in very heavy brush

Summit Tractors Brand Attachments & Implements



Summit Tractors 42\"/>



**Summit Tractors DTX1.5
Dump Trailer**
DTX1.5



Summit Tractors 48\"/>



Summit Tractors 60\"/>



Summit Tractors 54\"/>



**Summit Tractors BPX60
BoxPlane**
BPX60



**Summit Tractors TX25H
Tractor & Loader**
TX25HLX85



**Summit Tractors TX25H
Tractor & Loader w/Backhoe**
TX25HLX85BHX76



 
Summit Tractors 60\"/>



Summit Tractors 60\"/>



Summit Tractors 54\"/>

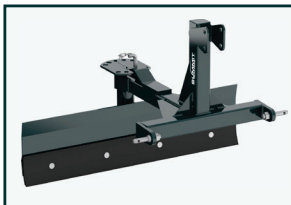

Summit Tractors 60\"/>



 
Summit Tractors 60\"/>



**Summit Tractors SSX500
Seeder/Spread**
SSX500



Summit Tractors 60\"/>

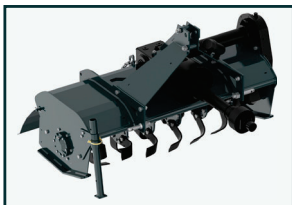

Summit Tractors 48\"/>



 
**Summit Tractors MBX1
Middle Buster**
MBX1



**Summit Tractors SSX1
Sub-Soiler**
SSX1



**Summit Tractors CAX1
Carry All**
CAX1

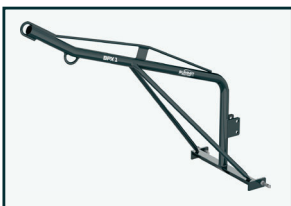

**Summit Tractors BPX1
Boom Pole**
BPX1



**Summit Tractors QHX1
Quick Hitch**
QHX1



**Summit Tractors TMX1
Trailer Mover**
TMX1



**Summit Tractors Optional
16\"/>**



Summit Tractors Optional 8\"/>

**SUMMIT
TRACTORS
PRODUCT GUIDE**



Visit the Summit Tractors Product Learning
Center to See the Full Line

**See Your Summit Tractors Retailer for
Pricing and Ordering Information**

Summit BHX76 Backhoe & GX54 Grapple



Summit BHX76 Backhoe



Mechanical Thumb - Standard

- Made in USA
- Independent Operator Seat – Standard
- Mechanical Thumb – Standard
- Bucket Cylinder Digging Force – 2,270 lbs.
- Dipperstick Cylinder Digging Force – 1,248 lbs.
- Maximum Digging Depth – 76" (6' 4")
- Two-Year Warranty
- 12" Bucket Standard – Optional 8" & 16" Buckets & Optional Street Pads
- **See a Complete Walk-Around Video of the Summit BHX76 Backhoe on <https://summittractors.com/backhoes.php>**

SEE
COMPLETE
VIDEO
BACKHOE
FEATURE
WALKAROUND



Summit GX54 Grapple



Carry Large Objects & Brush or Any Material

- Made in USA
- Dual Hydraulic Cylinders
- Clamshell Lid Captures More Material
- Jagged Tines to Cut Through Tree Roots
- Heavy Duty Grade A50 Steel
- Working Width 54"
- Weight – Only 255 Lbs. Preserves Lift Capacity
- One-Year Warranty

Summit BPX60 BoxPlane & PFX36 Pallet Forks



Box Blade Mode



Land Plane Mode

- Made in USA
- Two Implements in One – Box Blade & Land Plane
- Convertible Rear Gate to Change From Box Blade to Land Plane Mode (Patent Pending)
- Removeable Forward Cutting Edge
- 60" Working Width
- Four Scarifiers With Three Height Adjustments
- Category 1 3-pt. Hitch Compatible
- Weight – 500 lbs.
- Two-Year Warranty



- Skid-Steer Quick Attach (SSQA) Loader Compatible
- Load Capacity: 2,000 lbs.
- Adjustable, 42" Forks
- Weight: 292 lbs.
- Overall Height 37", Width 46.5", Length 44"



Summit Tractors Maintenance - Intervals and Fluid Specifications

MAINTENANCE SCHEDULE: Please refer to and utilize the following maintenance schedule, which applies to tractors operated in normal conditions. Adjust accordingly when frequently used in wet, muddy conditions; for example by cleaning and greasing more frequently, or by cleaning the air cleaner element and fuel filter more frequently when operated in dry, dusty conditions. **PLEASE REFER TO SECTION 50 (FIFTY) OF YOUR TRACTOR OPERATOR'S MANUAL FOR ADDITIONAL INFORMATION RELATED TO THE PERFORMANCE OF TRACTOR MAINTENANCE**

MAINTENANCE AREA	FREQUENCY						
	50 HOURS	EVERY 250 HOURS	EVERY 500 HOURS	EVERY 750 HOURS	EVERY 1000 HOURS	EVERY 1250 HOURS	EVERY 1500 HOURS

GENERAL

Washing	W	W	W	W	W	W	W
Greasing	G	G	G	G	G	G	G
Re-Tighten Fasteners	CT	CT	CT	CT	CT	CT	CT
Rear View Mirror Holder	CT	CT	CT	CT	CT	CT	CT

ENGINE

Engine Oil	R	R	R	R	R	R	R
Engine Oil Filter	R	R	R	R	R	R	R
Tappet (Valve Lifter) Clearance	CA	CA	CA	CA	CA	CA	CA
Fuel Filter Element	R	R	R	R	R	R	R
Fan Belt Tension	CT	CT	CT	CT	CT	CT	CT
Radiator Coolant Level	CP	CP	CP	CP	CP	CP	CP
Coolant Change/Radiator Flushing	Every 1000 hours or 2 years, whichever is earlier						
Air Cleaner Element	CL	CL	CL	CL	CL	CL	CL
Fuel Injector	Nozzle tip cleaning every 1500 hours or when required. Fuel injection nozzle every 3000 hours or when required						
Glow Plug			C		C		C
Fuel Tank Cleaning	Every 500 hours or one year, whichever is earlier						

TRANSMISSION/HYDRAULIC

Transmission Breather Assembly	CL	CL	CL	CL	CL	CL	CL
Hydraulic Oil Filter (Suction)	R	R	R	R	R	R	R
Hydraulic Oil Filter (Delivery)	R	R	R	R	R	R	R
Transmission Oil	R	R	R	R	R	R	R
Operation of Hydraulic Lift	C	C	C	C	C	C	C
Hydraulic Oil Strainer	CL	CL	CL	CL	CL	CL	R

BRAKES

Operation of Brakes	C	C	C	C	C	C	C
Brake Pedal Free Play	CA	CA	CA	CA	CA	CA	CA

C-Check, **CA**-Check & Adjust, **CL**-Clean, **CR**-Clean & Replace, **CT**-Check & Tighten, **G**-Greasing, **R**-Replace, **W**-Wash.
Beyond 1500 hours, repeat the cycle every 250 hours.



Summit Tractors Maintenance - Intervals and Fluid Specifications

MAINTENANCE SCHEDULE: Please refer to and utilize the following maintenance schedule, which applies to tractors operated in normal conditions. Adjust accordingly when frequently used in wet, muddy conditions; for example by cleaning and greasing more frequently, or by cleaning the air cleaner element and fuel filter more frequently when operated in dry, dusty conditions. **PLEASE REFER TO SECTION 50 (FIFTY) OF YOUR TRACTOR OPERATOR'S MANUAL FOR ADDITIONAL INFORMATION RELATED TO THE PERFORMANCE OF TRACTOR MAINTENANCE**

MAINTENANCE AREA	FREQUENCY						
	50 HOURS	EVERY 250 HOURS	EVERY 500 HOURS	EVERY 750 HOURS	EVERY 1000 HOURS	EVERY 1250 HOURS	EVERY 1500 HOURS

STEERING

Steering Operation	C	C	C	C	C	C	C
--------------------	---	---	---	---	---	---	---

FRONT AXLE 4X4

Front Axle Differential Oil	R	C	R	C	R	C	R
Breather Assembly	CL	CL	CL	CL	CL	CL	CL
Front Axle Pivot	C	C	CA	C	CA	C	CA

TIRES & WHEELS

Front & Rear Wheel Bolts	CT	CT	CT	CT	CT	CT	CT
Tire Inflation Pressure	CA	CA	CA	CA	CA	CA	CA

BATTERY

Battery Electrolyte Level	C	C	C	C	C	C	C
Battery Terminals	CA	CA	CA	CA	CA	CA	CA

ELECTRICAL

Function of All Gauges & Meters	C	C	C	C	C	C	C
---------------------------------	---	---	---	---	---	---	---

C-Check, **CA**-Check & Adjust, **CL**-Clean, **CR**-Clean & Replace, **CT**-Check & Tighten, **G**-Greasing, **R**-Replace, **W**-Wash.
Beyond 1500 hours, repeat the cycle every 250 hours.

OIL AND LUBRICATION CHART

OIL, LUBRICANT OR FUEL CATEGORY	CAPACITY	RECOMMENDED GRADE
Engine Oil	1.11 US Gallons (4.2 Liters)	15W40, API: CJ-4, CI-4 Plus, CI-4, CH-4, Total Rubia TIR 7900: 0W40, CI-4 or higher for temp 14 deg. F to -4 degree F (-10 deg C to -20 deg C)
Transmission	6.6 US Gallons (25 Liters)	ISO VG 32/ISO VG56
Front Axle	0.7 US Gallons (2.7 Liters)	Total Dynatrans MP/API: GL-5
Fuel	6.87 US Gallons (26 Liters)	Ultra Low Sulphur Diesel Fuel
Coolant	1.14 Gallons (4.3L) Antifreeze, .45 Gallons (1.72L) Distilled Water Recommended Ratio: 60% : 40%	

WARRANTY INFORMATION



Register Your Tractor to Be Eligible for
Warranty Service



LIMITED WARRANTY FOR NEW SUMMIT TRACTORS AND SUMMIT FRONT-END LOADERS

A. GENERAL PROVISIONS: The warranties described below are provided by Summit Tractors LLC ("Summit") to the original purchasers of new SUMMIT brand tractors and front-end loaders ("Equipment") from any SUMMIT retail store location. Under the warranties provided by SUMMIT, SUMMIT will repair or replace, at its option, any covered part which is found to be defective in material or workmanship during the applicable warranty term. Warranty service must be performed at a service center authorized by SUMMIT to service the type of Equipment involved, which will use only new or remanufactured parts or components furnished or sourced by SUMMIT. Warranty service will be performed without charge to the purchaser for parts and labor. The purchaser will be responsible, however, for any service call and/or transportation of any Equipment or Product to and from the service center's place of business, and for any service and/or maintenance not directly related to any defect covered under the warranties below. These warranties are transferable provided an authorized SUMMIT service center is notified of the ownership change, and SUMMIT approves the transfer. SUMMIT reserves the right to make alterations or modifications in its equipment at any time, which in its opinion may improve the performance and efficiency of the Product. SUMMIT shall not be obliged to make such alterations to products which have been shipped or are in service.

B. WHAT IS WARRANTED: Subject to the Length of Warranty Chart below, as amended from time to time, acknowledging limitations on the term of warranty, all parts of any new SUMMIT Equipment, except tires and wheels and batteries (which are warranted by the manufacturer of each product), are warranted for the number of months or operating hours specified below. Warranty statements required by law covering engine emission-related parts and components, which shall not be less than the engine warranty, are found in the operator's manual delivered with the equipment. Included in the Summit Tractors Powertrain Warranty - Engine: cylinder block, cylinder head, valve covers, oil pan, timing gear covers, flywheel housing, emission control components and all parts contained therein. Powertrain: Transmission, transmission case, differential and axle housing, MFWD front axle assembly, and all parts contained therein. The Powertrain Warranty does not include external drivelines, or steering cylinders including but not limited to the HST assembly (HST pump), HST damper plate, and the HST damper assembly.

C. WHAT IS NOT WARRANTED - SUMMIT IS NOT RESPONSIBLE FOR THE FOLLOWING: (1) Used equipment; (2) Any Equipment that has been altered or modified in ways not approved by SUMMIT, including but not limited to setting injection pump fuel delivery above SUMMIT or manufacturer specifications; (3) Depreciation or damage caused by normal wear and tear, lack of reasonable or proper maintenance, failure to follow operating instructions, misuse, lack of proper protection during storage, or accident; (4) Normal maintenance parts and service including, but not limited to, light bulbs, filters (oil, fuel, air and hydraulic), belts, motor brushes, brakes, fuses and switches, clutch linings, engine tune-up, wheel alignment, blade sharpening and lubrication. Purchasers have a duty to maintain maintenance records. In SUMMIT's sole and absolute discretion, SUMMIT may request documentation of maintenance. Failure to maintain and provide maintenance records upon request, at the option of SUMMIT, shall void all warranty and prohibit all warranty claims. Any use or operation of the Product beyond the rated capacity expressly prohibited in the Operator's Manual or any adjustment or assembly procedures not recommended or authorized in the Operator's Manual shall immediately VOID this limited warranty.

D. SECURING WARRANTY SERVICE - To secure warranty service, the original purchaser or a subsequent purchaser to whom the applicable warranty has been properly transferred as described above must (1) Report the product defect in writing to an authorized Summit Tractors service center and request repair within the applicable warranty period (2) Present written evidence that the warranty registration for the particular piece of Equipment has been completed and indicate the warranty start date, and (3) Bring the Equipment to an [authorized] SUMMIT service center within five (5) business days and prior to the expiration of the applicable warranty period.

E. LIMITATION OF IMPLIED WARRANTIES AND OTHER REMEDIES -EQUIPMENT - To the extent permitted by law, neither SUMMIT nor any business entity affiliated with SUMMIT ("SUMMIT Affiliate"), nor any director, officer, employee, or member of SUMMIT or any SUMMIT Affiliate, make(s) any warranties, representations or promises as to the quality, performance or freedom from defect of the Equipment covered by the warranties described herein. Except as described in this Limited Warranty, no other warranty is provided and ALL OTHER WARRANTIES ARE DISCLAIMED, INCLUDING BUT NOT LIMITED TO ALL EXPRESS AND IMPLIED WARRANTIES, WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. All existing warranties, including IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TO THE EXTENT APPLICABLE, SHALL BE LIMITED IN DURATION TO THE APPLICABLE PERIOD OF WARRANTY SET FORTH HEREIN. Unless otherwise prohibited by law, THE PURCHASER'S ONLY REMEDIES IN CONNECTION WITH THE BREACH OR PERFORMANCE OF ANY WARRANTY OF THE EQUIPMENT ARE THOSE SET FORTH HEREIN. IN NO EVENT WILL THE SERVICE CENTER, SUMMIT OR ANY SUMMIT AFFILIATE OR AGENT THEREOF BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR PUNITIVE DAMAGES (INCLUDING BUT NOT LIMITED TO, LOSS OF REVENUE, LOSS OF USE, LOAN PAYMENTS, COST OF RENTAL OR SUBSTITUTE EQUIPMENT, INSURANCE COVERAGE, STORAGE, LODGING, TRANSPORTATION, FUEL, MILEAGE AND COMMUNICATION COSTS). (Note: some states do not allow limitations on how long and implied warranty lasts or the exclusion or limitation of incidental or consequential damages so the above limitations and exclusions may not apply to you, but they are intended to apply to the greatest extent permitted by law.) This warranty gives you the specific legal rights, and you may also have other rights which vary from state to state. NEITHER SERVICE DEALER, NOR ANY OF ITS EMPLOYEES, AGENTS, OR REPRESENTATIVES ARE AUTHORIZED TO PROVIDE ANY ORAL WARRANTY, OR ASSUME AND ADDITIONAL OBLIGATIONS OR LIABILITIES IN CONNECTION WITH SALE OR RESALE OF THE PRODUCTS. ANY ORAL STATEMENT MADE BY SERVICE DEALER OR ANY OF ITS EMPLOYEES, AGENTS OR REPRESENTATIVES REGARDING THE PRODUCTS DO NOT CONSTITUTE WARRANTIES, MAY NOT BE RELIED UPON AS SUCH BY THE PURCHASER AND ARE NOT PART OF ANY WARRANT. Any action by the purchaser arising hereunder or relating hereto, whether based on breach of contract, tort (including negligence and strict liability) must be initiated within one year after the cause of action or it shall be prohibited and the purchaser expressly waives any statute of limitations which might apply otherwise.

If further information is desired, contact SUMMIT using any of the methods listed in the "Contact Summit" sections of www.summittractors.com or the Summit Tractors Connect App.


LENGTH OF WARRANTY COVERAGE - EFFECTIVE JANUARY 2022

COVERAGE IS DETERMINED FROM DATE OF DELIVERY TO THE CUSTOMER BY MONTHS OR HOURS, WHICHEVER COMES FIRST

EQUIPMENT TYPE	ALL AGGREGATES	POWERTRAIN
GOVERNMENT & NON-COMMERCIAL USE ONLY*		
TRACTORS	36 MONTHS OR 2000 HOURS	84 MONTHS OR 3000 HOURS
		PLUS 12 ADDITIONAL MONTHS OR 3000 TOTAL HOURS EXTENDED POWERTRAIN WARRANTY
ALL OTHER USE		
TRACTORS	36 MONTHS OR 2000 HOURS	36 MONTHS OR 3000 HOURS
FRONT-END LOADERS, TIRES & WHEELS, BATTERIES		
FRONT-END LOADERS	12 MONTHS	NOT APPLICABLE
BACKHOES	24 MONTHS	NOT APPLICABLE
TIRES & WHEELS	12 MONTHS	NOT APPLICABLE
BATTERIES	12 MONTHS	NOT APPLICABLE

* Definition of Non-Commercial Use: Summit Tractors Equipment and associated products that are purchased and exclusively used for personal, consumer type of landowner usage or other small business use which does not include rental, demolition, paving, bulldozing, mining, quarry operations, graveyard or commercial forestry operations.

 
Tractor Registration & Service Resources

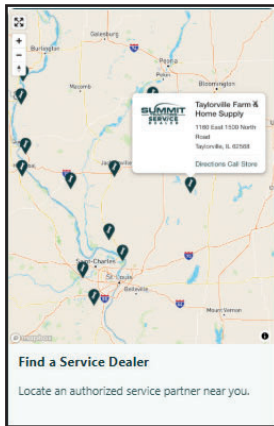


Find an Authorized Summit
Tractors Service Center



 Register Your Tractor Within 30 Days of
Purchase to Qualify for Warranty Coverage

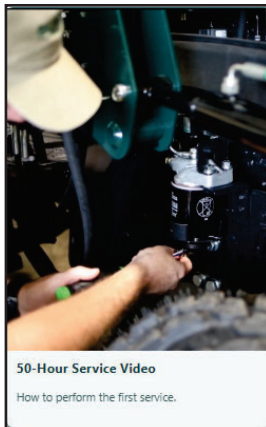

Watch the 50-Hour
Service Video

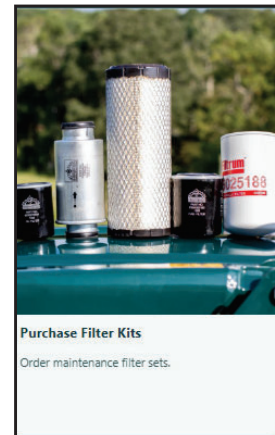 


Purchase Summit Tractors
Service Kits



SERVICE MANUALS, OPERATOR MANUALS & PARTS CATALOGS AVAILABLE ONLINE

Summit Tractors Website & Social Media

 - www.summittractors.com
- Very detailed product information including images, specifications, manuals, service books, videos, where to buy and service locators

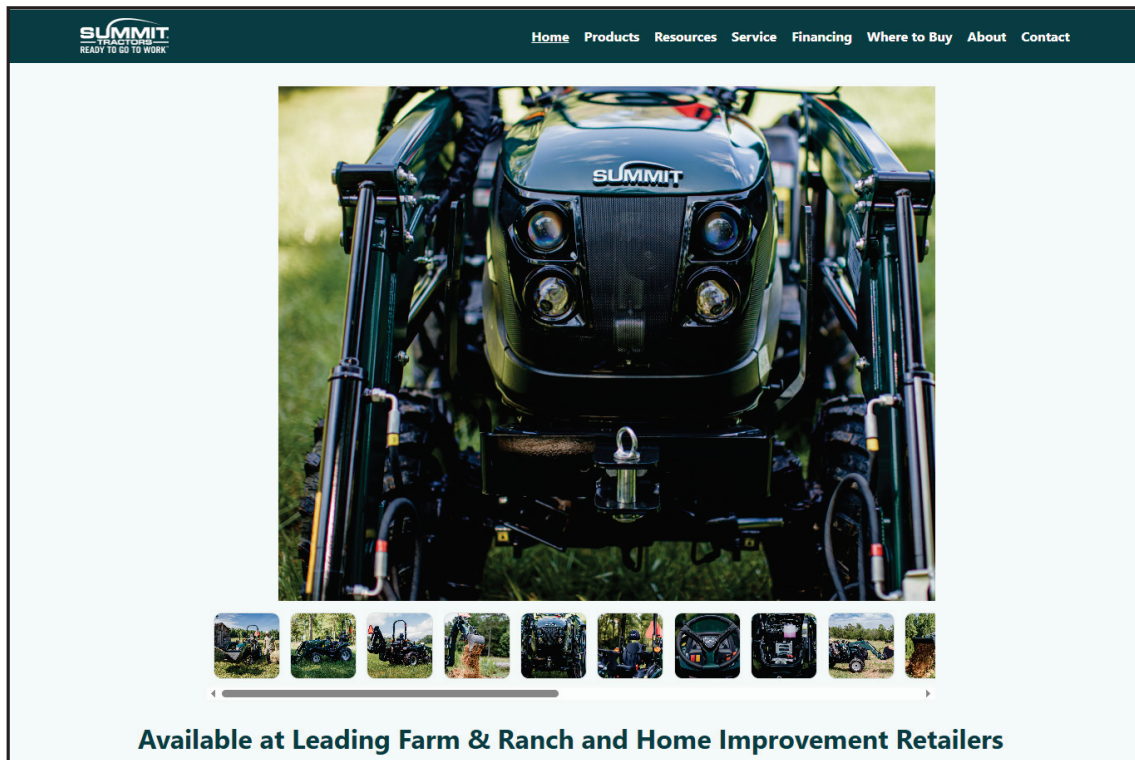

- FACEBOOK:
Summit Tractors
- FACEBOOK OWNERS:
Summit Tractors Owners
- YOUTUBE:
Summit Tractors
- INSTAGRAM:
Summit Tractors

Powered by  **TRACTORBYNET®**

- TRACTORBYNET.COM COMMUNITY FORUM



SUMMIT
TRACTORS

SEE SUMMIT TRACTORS PUT
TO WORK ON THE PINEY GROVE
HOMESTEAD YOUTUBE CHANNEL



- YOUTUBE
Check out Piney Grove Homestead to see Summit Tractors being put to work





READY TO GO TO WORK™



CONTACT SUMMIT TRACTORS

Call: 770-209-3390 – Press 1 for Sales, Press 2 For Service

Email Sales: sales@summittractors.com

Email Service: service@summittractors.com

OR VISIT [SUMMITTRACTORS.COM](https://summittractors.com)

