

Bleeding Fuel Line



Getting Started



TOOLS:

- Flat Head Screw Driver



PARTS:


- N/A



TIME FOR REPAIR:

- 5 mins

Steps 1 & 2

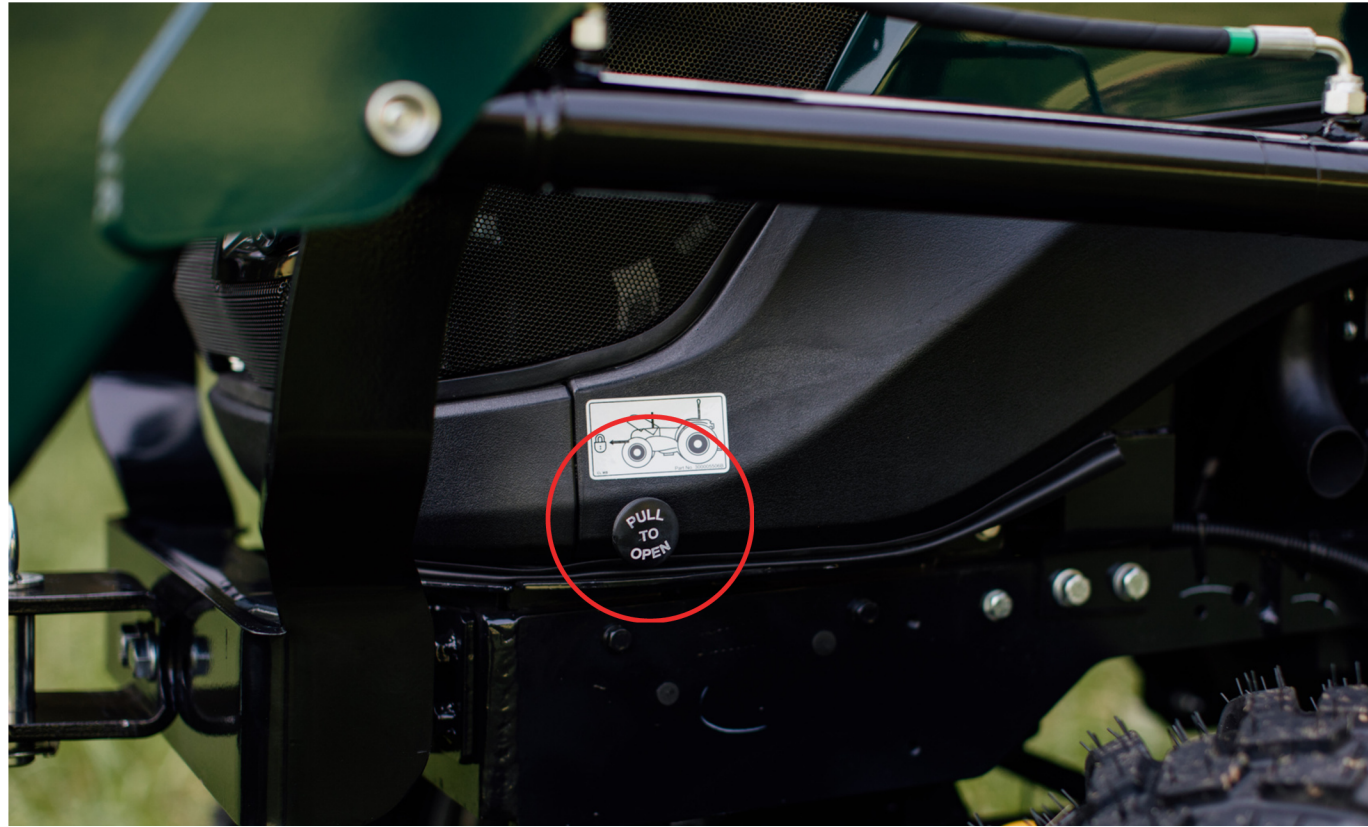


Pull knob on left side of the tractor to open the hood.




Turn the key in the ignition to the “on” position, but do not fire it up.

Steps 3 - 5

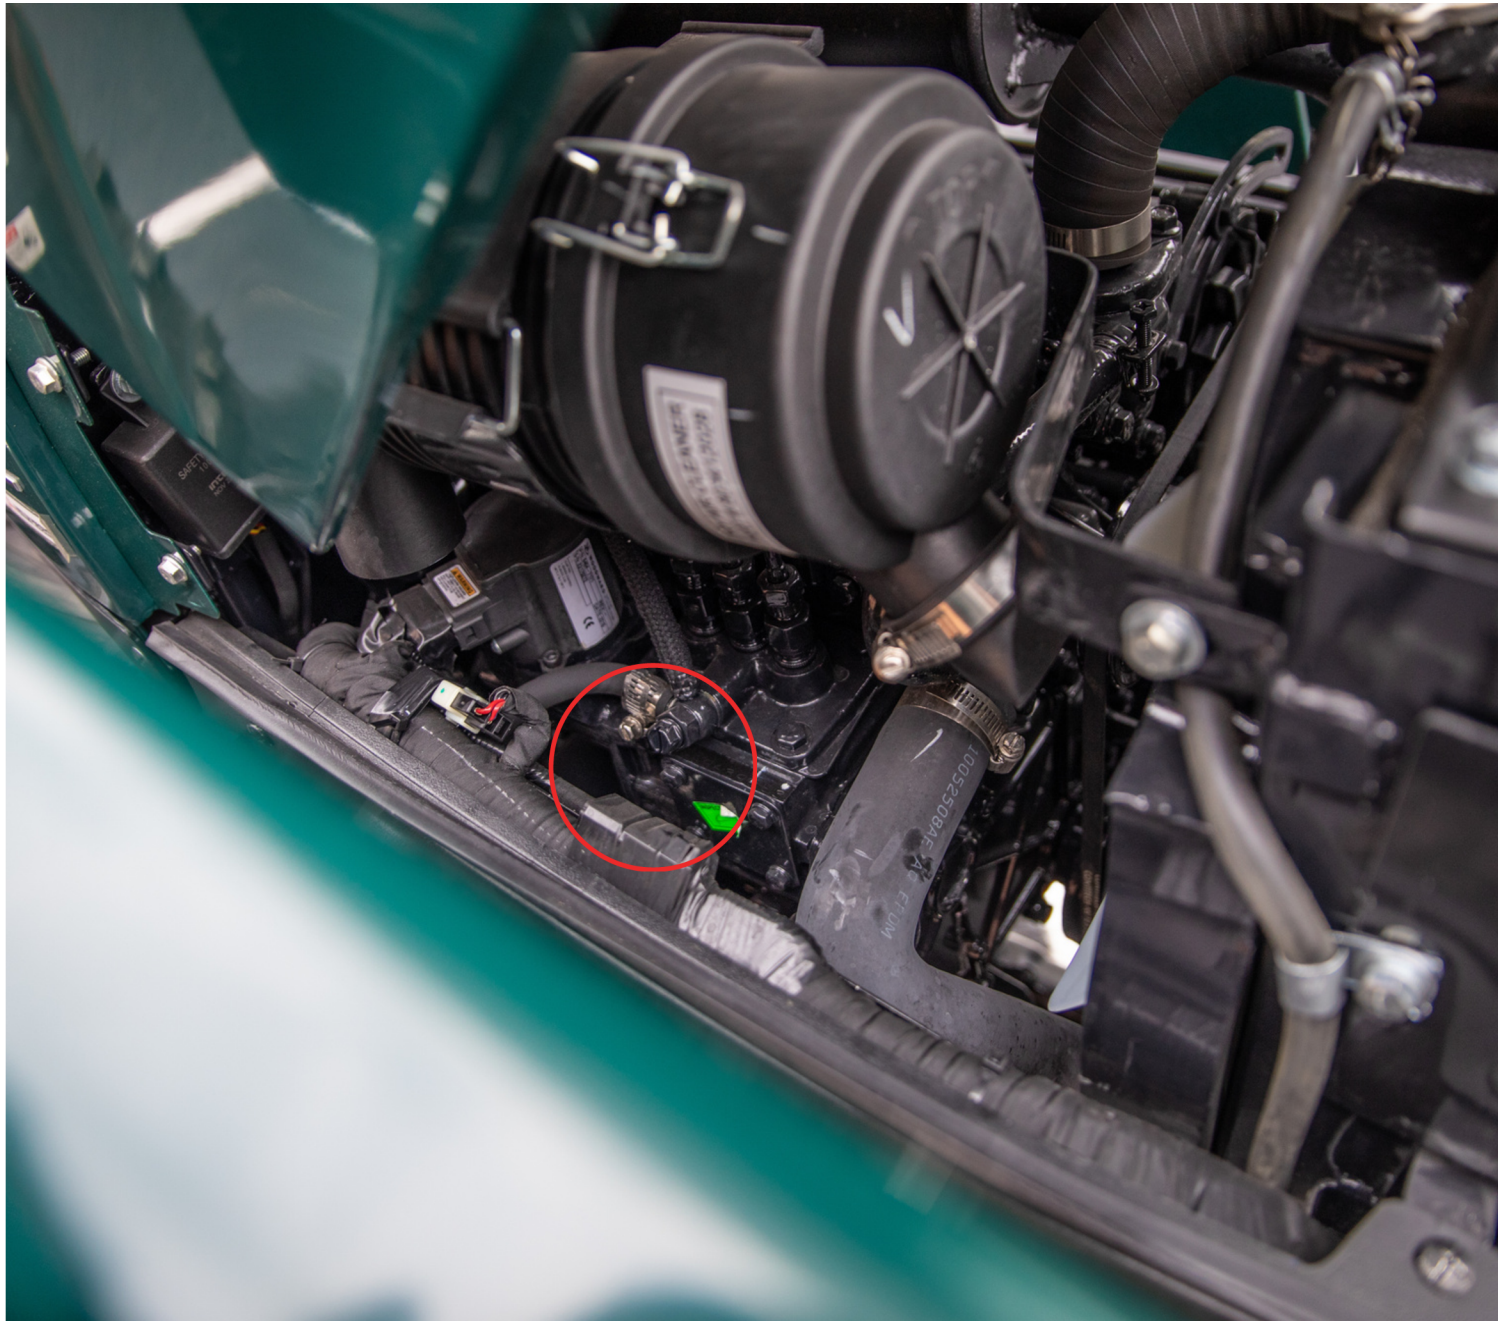

3. Locate the bleed screw
on the right side

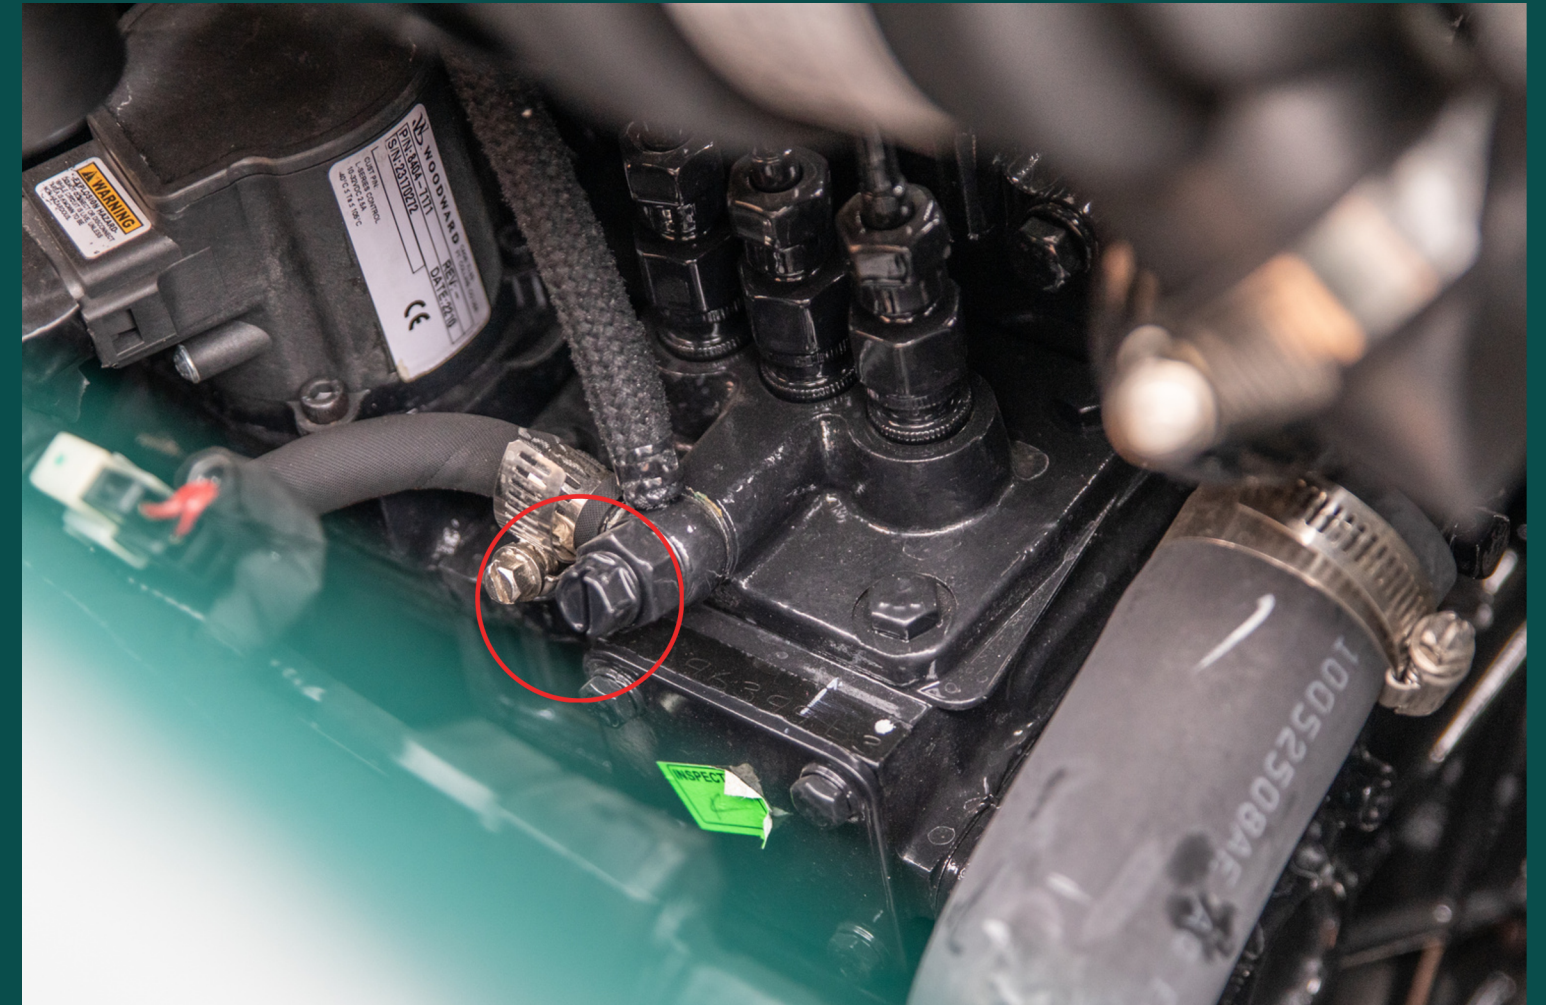

4. Slightly loosen the screw until a
steady stream of fuel begins
seeping out.

5. Re-tighten the screw.

Start up the tractor again.

**If this does not resolve your issue, or
you have any questions, please call us at
770-209-3390**