

Fuel Shut-Off Valve Installation



Getting Started



TOOLS:

Size 19mm wrench
Tray to collect fuel



PARTS:

2 Sealing washers (Inner Diameter
14.2 & Outer Diameter 19.9 x 1.5mm)



REQUIRED:

N/A



TIME OF REPAIR:


10 mins

Replace Existing Banjo



Dimensions required : M14*1.5*26



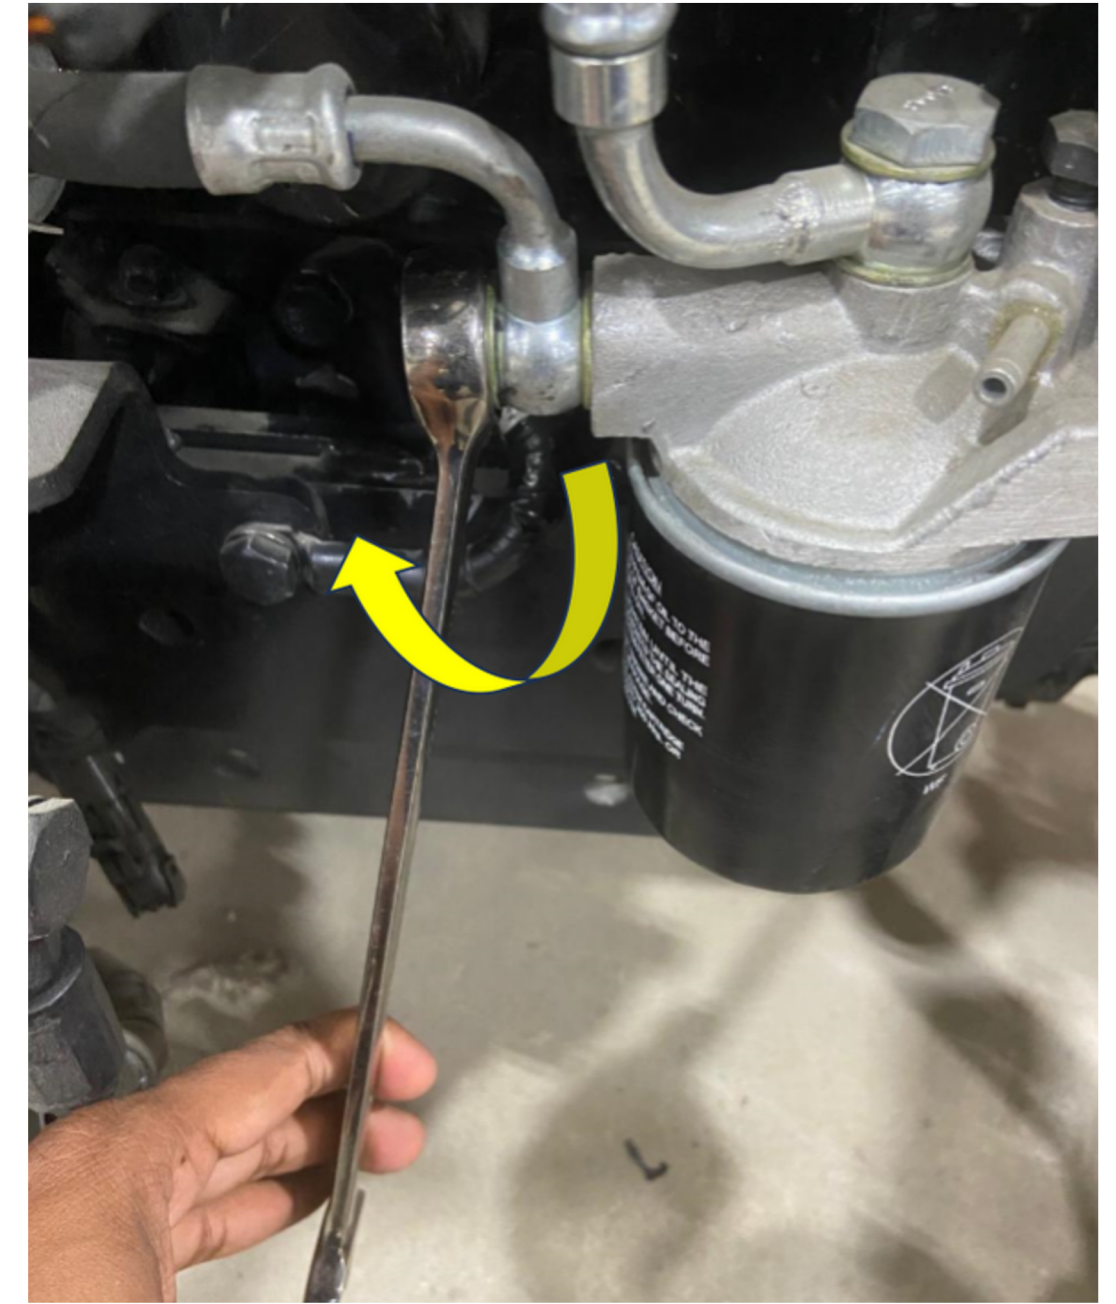

- Please identify the banjo on the fuel inlet pipe of the fuel filter
- Place a fuel collection tray right below the fuel filter



- Use existing dowty washers. If damaged, replace with new ones.
- Tighten the banjo bolt fully

How to Use



Open and fuel will flow



Close to stop fuel